

BASEBALL FOUL POLE - 15'




1-800-527-7510

THIS WARNING IS GIVEN IN COMPLIANCE WITH CALIFORNIA PROPOSITION 65:

WARNING

This product may contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

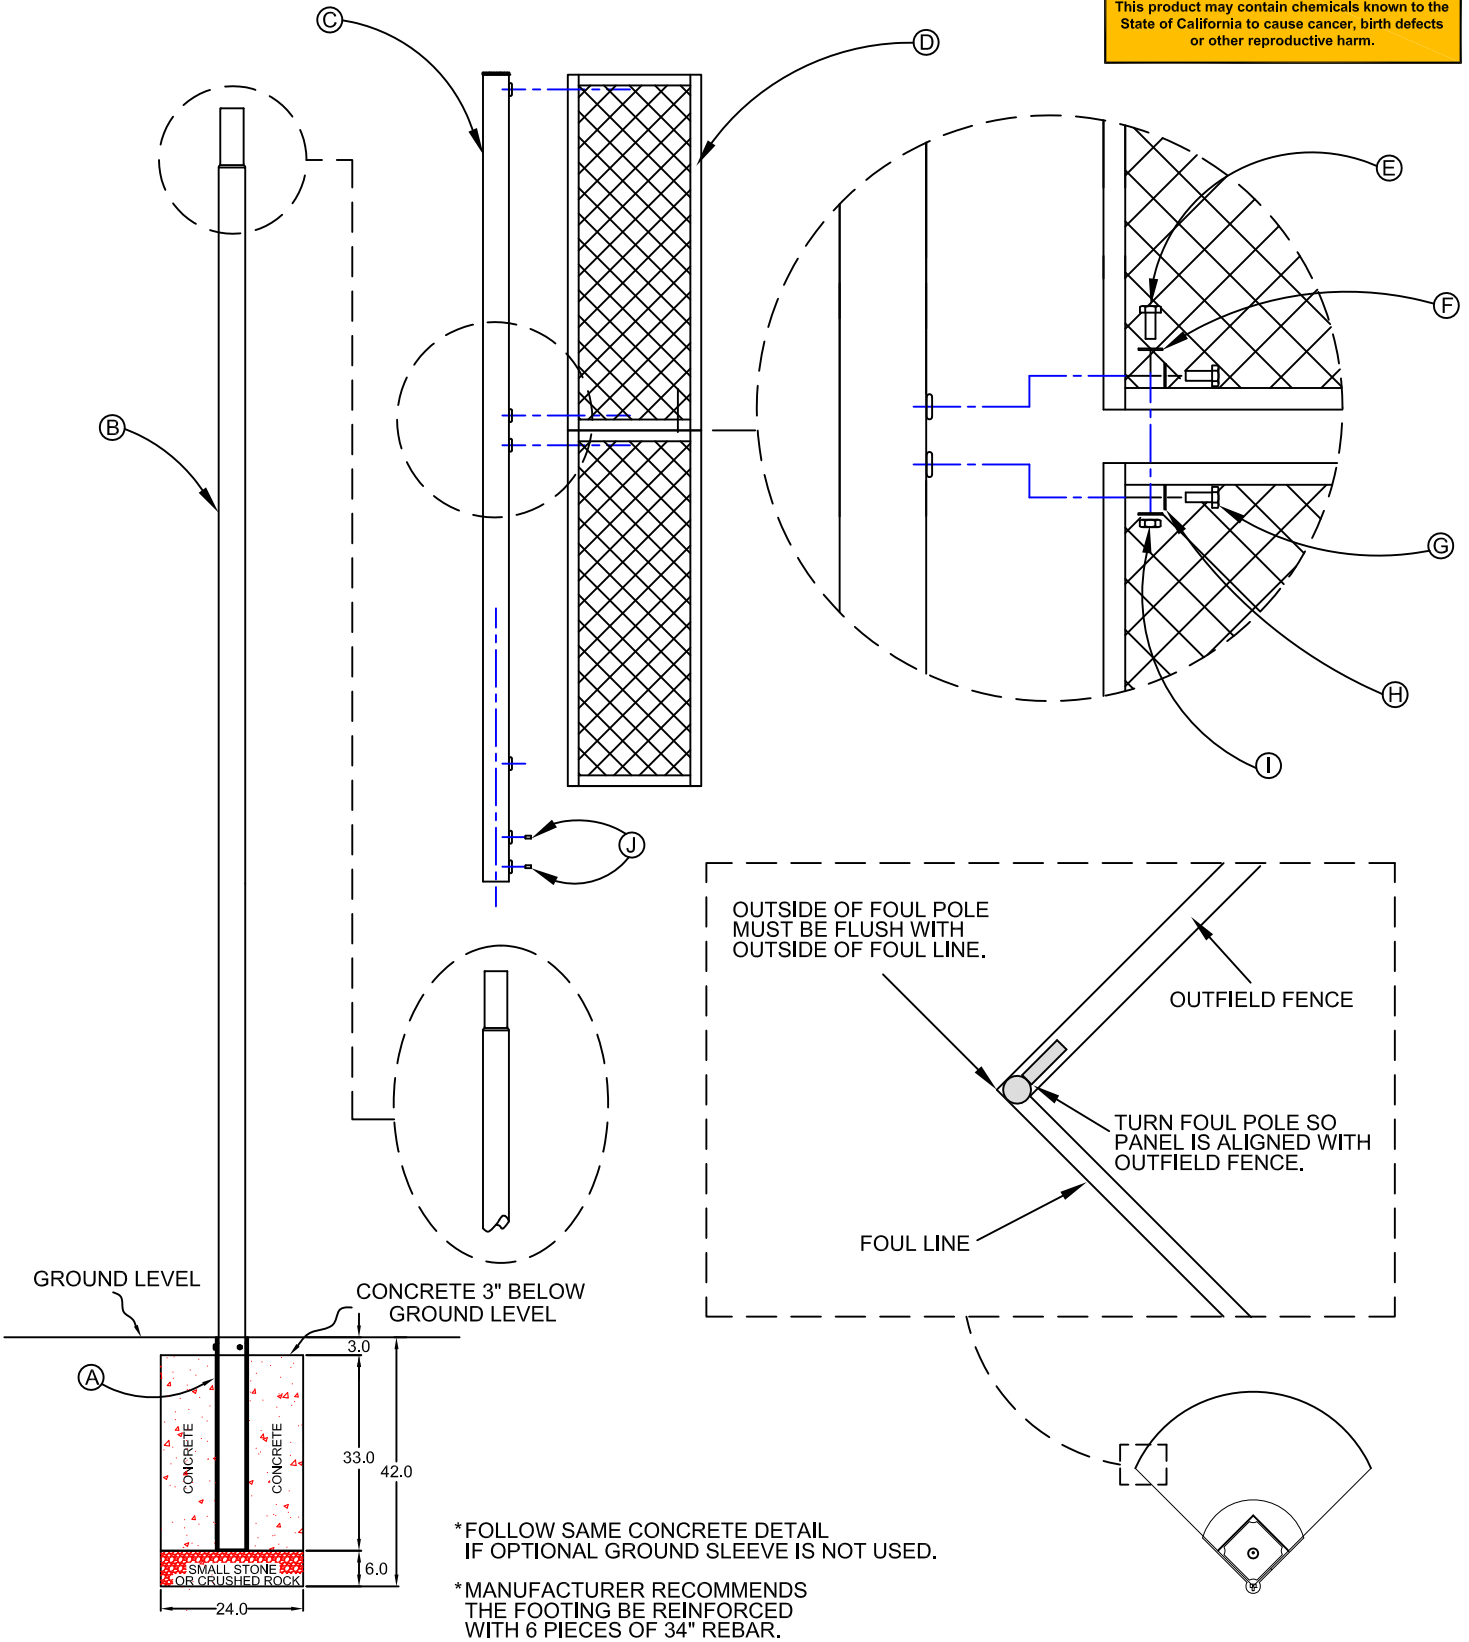

BASEBALL FOUL POLE - 15'

ITEM	DESCRIPTION	QTY
A	GROUND SLEEVE (OPTIONAL) 36"	1 PR
B	LOWER FOUL POLE W/ SWAGE END AND HARDWARE	2 EA
C	UPPER FOUL POLE	2 EA
D	PANEL	4 EA
E	BUTTON HEAD SOCKET BOLT 8 MM	4 EA
F	WASHERS 8 MM	8 EA
G	BUTTON HEAD SOCKET BOLT 12 MM	8 EA
H	WASHER 12 MM	8 EA
I	LOCK NUT 8 MM	4 EA
J	SOCKET SET SCREW 12 MM	4 EA

IMPORTANT NOTE: HARDWARE ITEMS ARE PACKAGED INSIDE THE LOWER POLE.

INSTALLING GROUND SLEEVE

STEP 1) Dig hole. It is recommended that you dig a hole that is 24" diameter and 42" deep. Local soil conditions may vary. Please consult your local contractor.

STEP 2) Plumb Ground Sleeve and concrete in place. (Be sure to pour concrete 3" below ground level. This will allow room to tighten the set screws. Allow concrete to dry for 72 hours.)

ASSEMBLY INSTRUCTIONS

STEP 1) Lay out all parts and consult Parts List to see that you have received all of the parts. All bolts, nuts and washers are packaged inside of the Lower Pole (**item B**) .

STEP 2) Place parts on a flat surface to assemble.

STEP 3) Start assembly process by attaching two Panels (**item D**) to each other using Button Head Socket Bolt, Washers and Lock Nut (**item E,F,I**) .

STEP 4) Attach Panel (**item D**) to Upper Foul Pole (**item C**) using four Button Head Socket Bolts and four Washers (**item G,H**) .

STEP 5) Slide the Lower Foul Pole (**item B**) into the Upper Foul Pole (**item C**) and attach using two Socket Set Screws (**item J**) .

STEP 6) Set Foul Pole into the Optional Ground Sleeve (**item A**) and tighten set screws in Ground Sleeve.